Temperaturkennlinie für PTC 2–Sensor

Eingabe der Werte des Sensors über die Parametriersoftware S2 Commander.

Die Software steht zum kostenlosen Download unter http://www.ief-werner.de/produkte/komponenten/steuerungstechnik/leistungsverstaerker/lv-servotec-s2-fs/downloads/ bereit.

Bei anderen Verstärkertypen gehen Sie bitte auf die gleiche Weise vor.

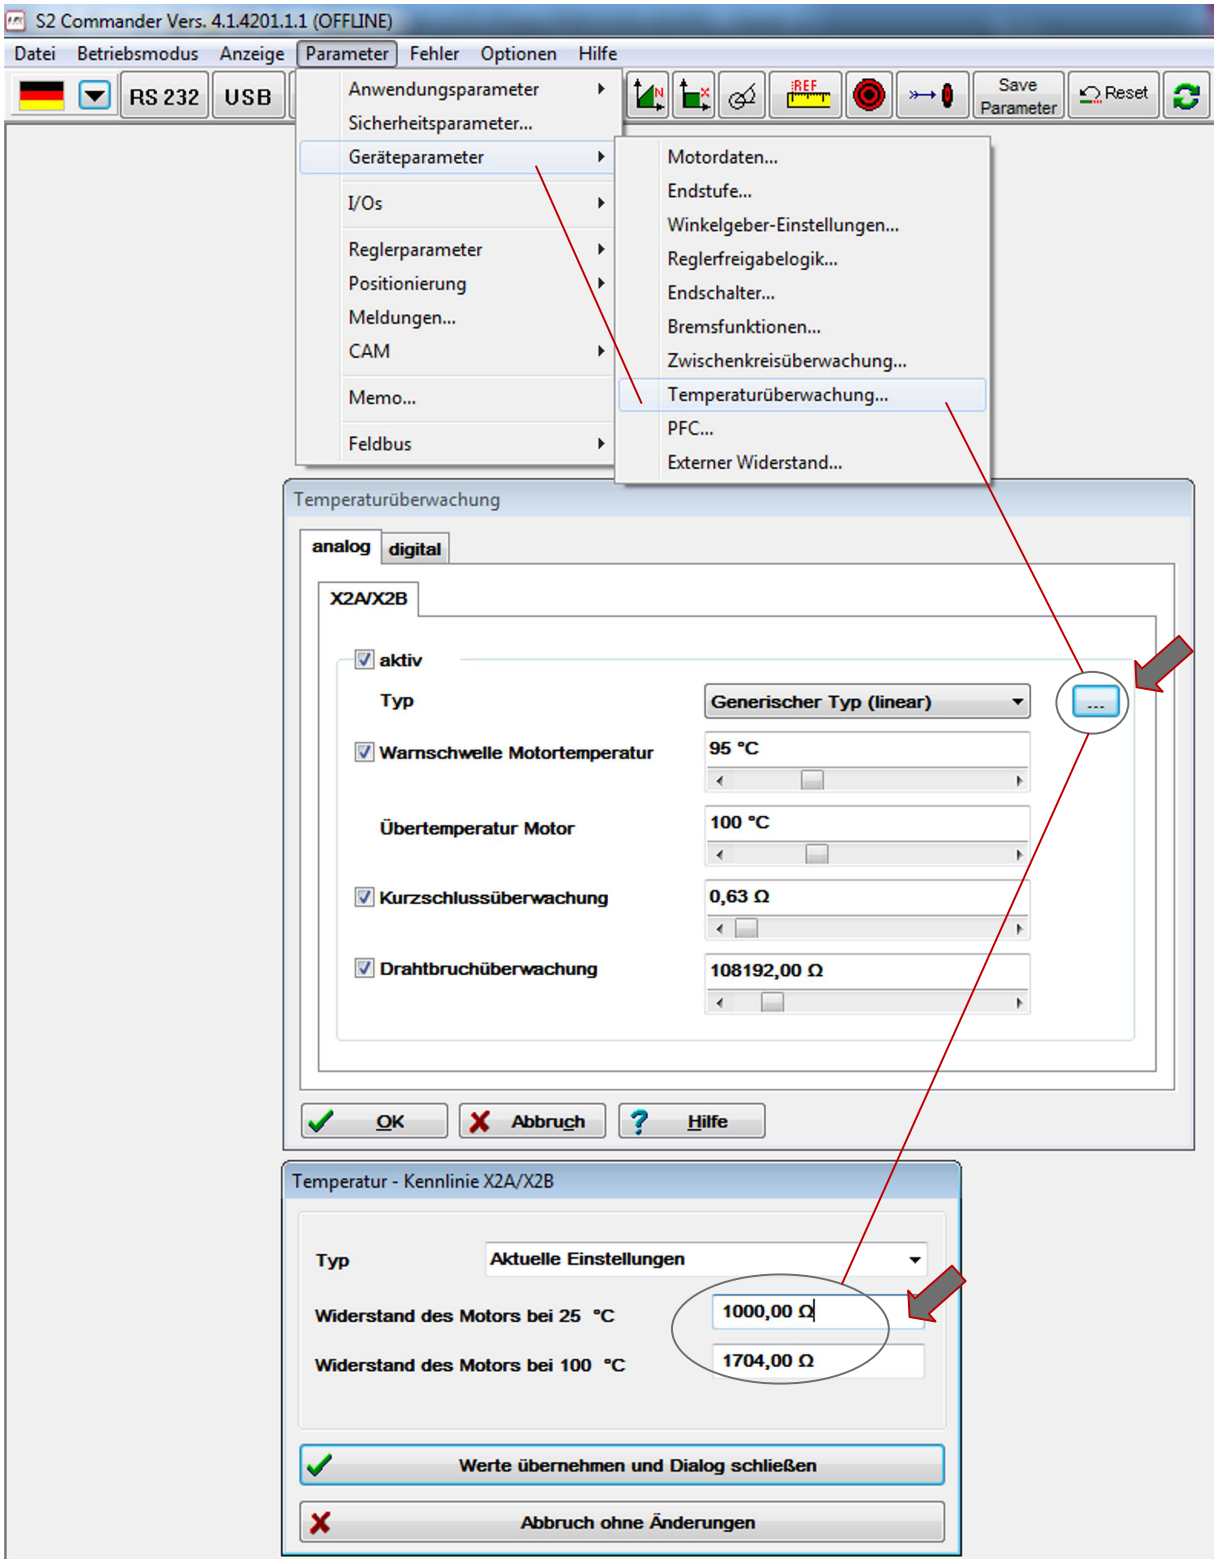

Temperaturkennlinie für andere Verstärkertypen

Wenn Sie einen anderen Leistungsverstärker benutzen, können Sie sich an dieser Temperaturkennlinie orientieren, um ihr Gerät dementsprechend einzustellen.

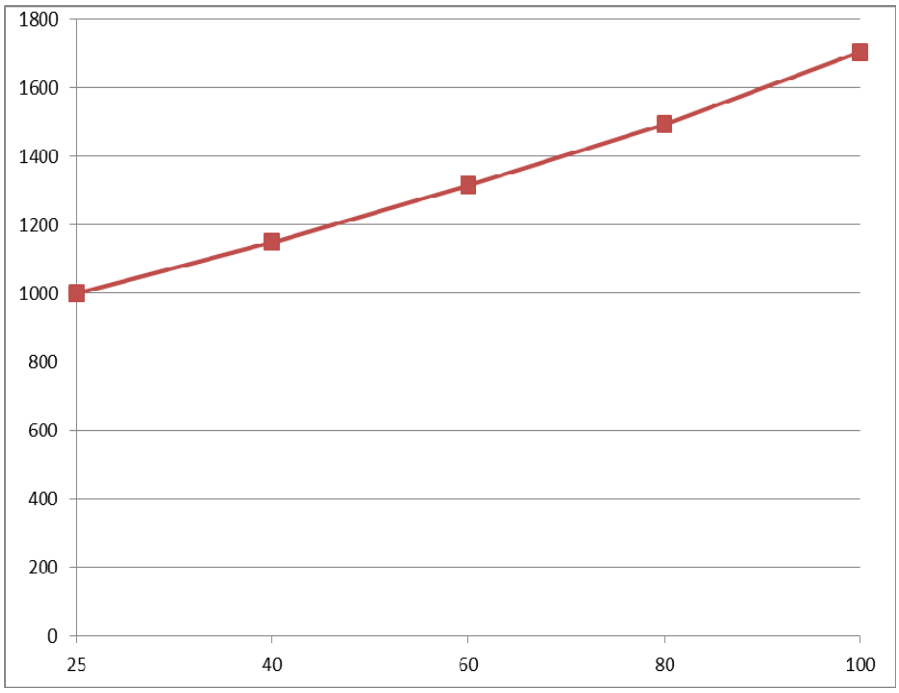

TEMP (°C)	RESISTANCE (Ω) NOMINAL
−40	564
−30	620
−20	682
−10	745
0	813
10	885
20	961
25	1,000
30	1,039
40	1,122
50	1,210
60	1,303
70	1,397
80	1,494
90	1,599
100	1,704
110	1,810
120	1,911
130	1,989

Temperature charactericstic for PTC 2 sensor

Entering the values of the sensor via the parameterisation software S2 Commander.

The software is available for free download at www.ief-werner.de/en/products/components/control-technology/power-amplifiers/lv-servotec-s2-fs/downloads/

By other types of amplifier please proceed the same way.

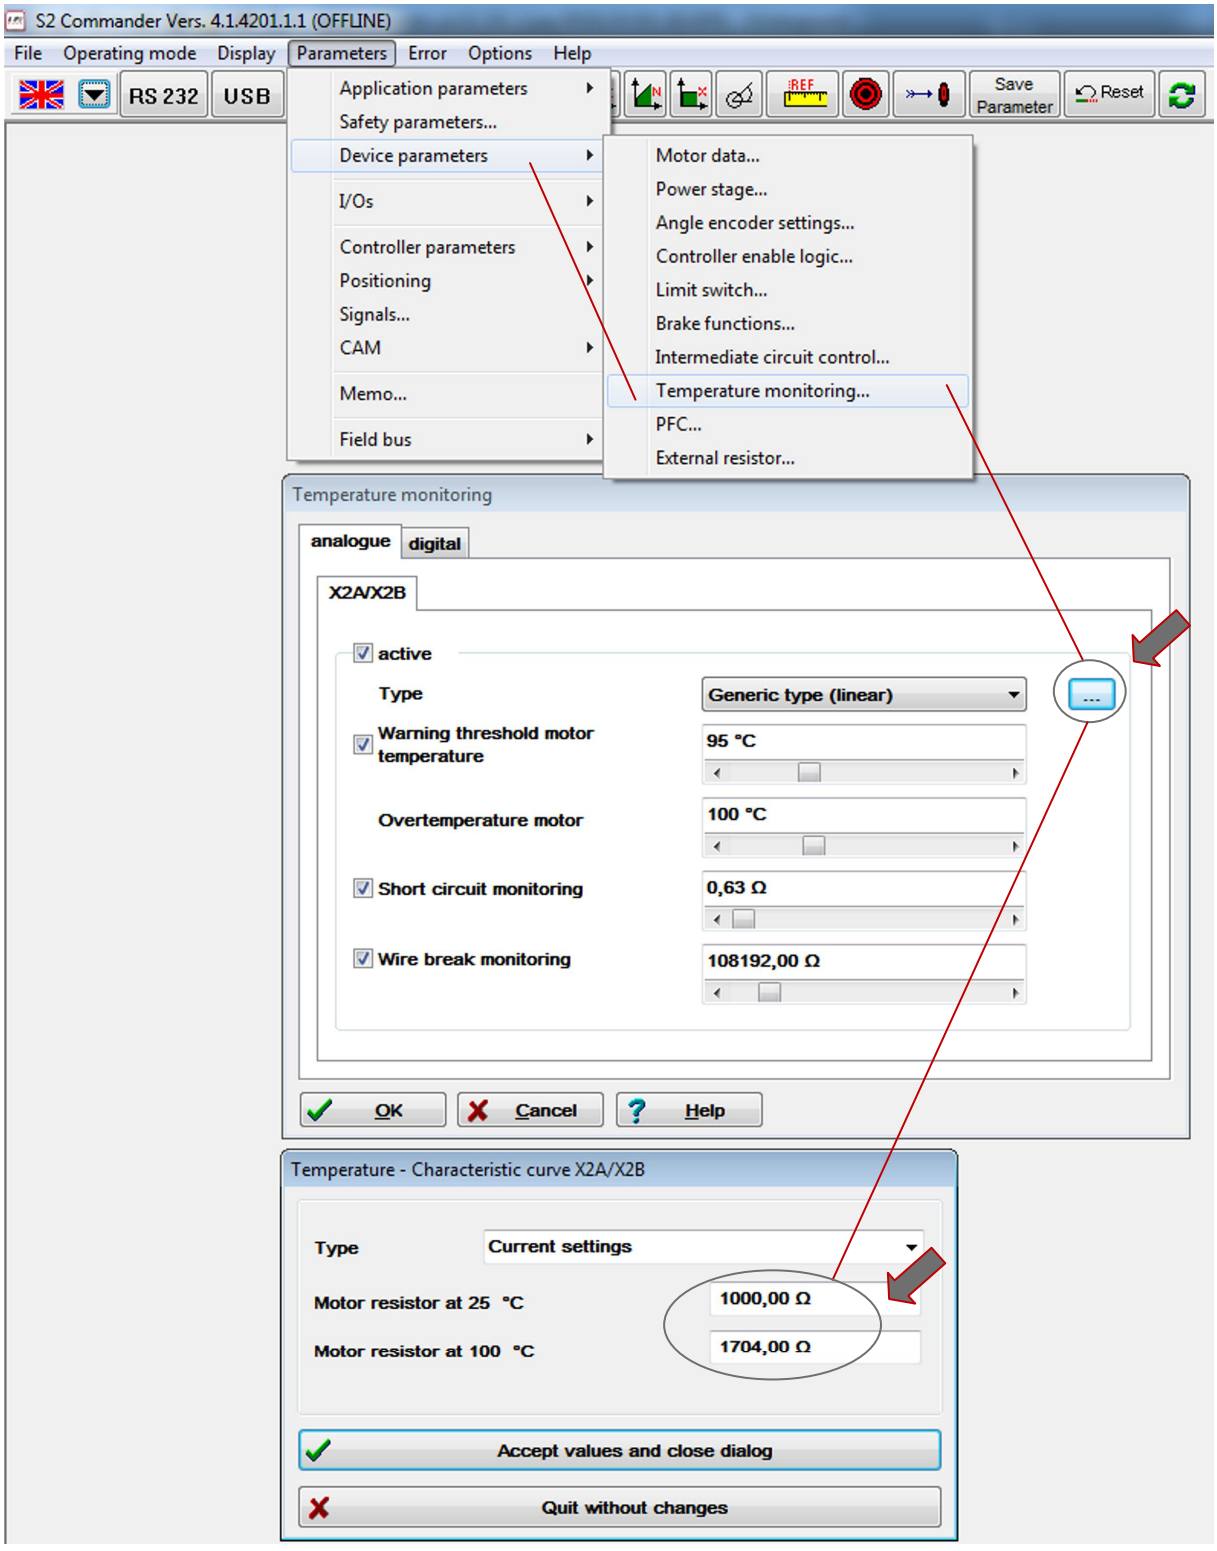

Temperature characteristic for other amplifier types

If you use another power amplifier, you can refer to this temperature characteristic to adjust your device accordingly.

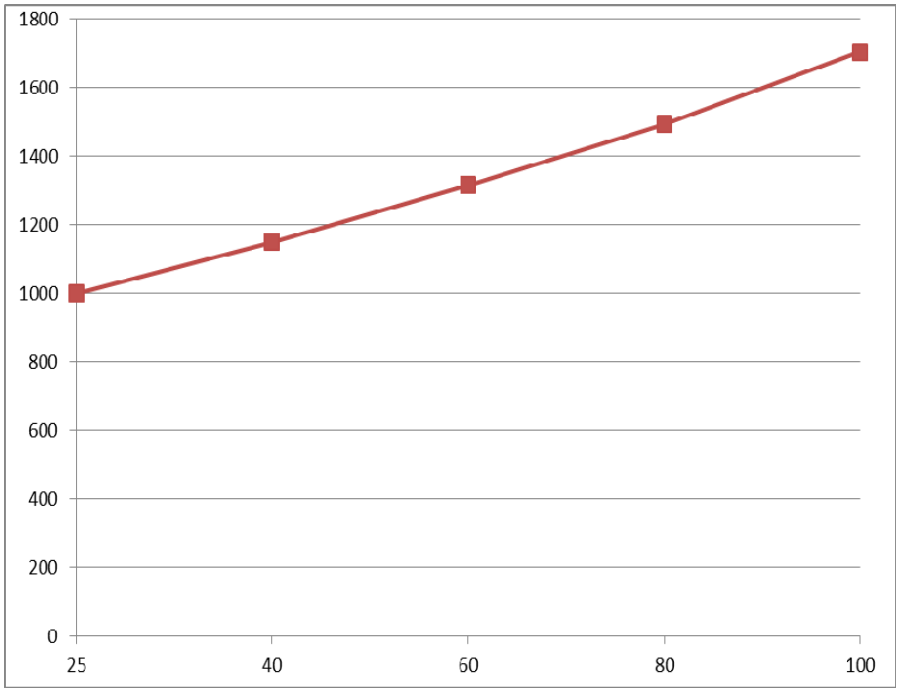

TEMP (°C)	RESISTANCE (Ω) NOMINAL
−40	564
−30	620
−20	682
−10	745
0	813
10	885
20	961
25	1,000
30	1,039
40	1,122
50	1,210
60	1,303
70	1,397
80	1,494
90	1,599
100	1,704
110	1,810
120	1,911
130	1,989